

AUDI 3.0 TFSI IBF PULLEY INSTALLATION GUIDE

AUTHOR:

IBF, DUCHNICKA 3, 01-796 WARSZAWA, POLAND

AUTHOR:

IBF, DUCHNICKA 3, 01-796 WARSZAWA, POLAND

1. Remove your kompressor from a car. Here you can see remover.












2. Small screwing bolts are 17, bigger is 22 (metric).



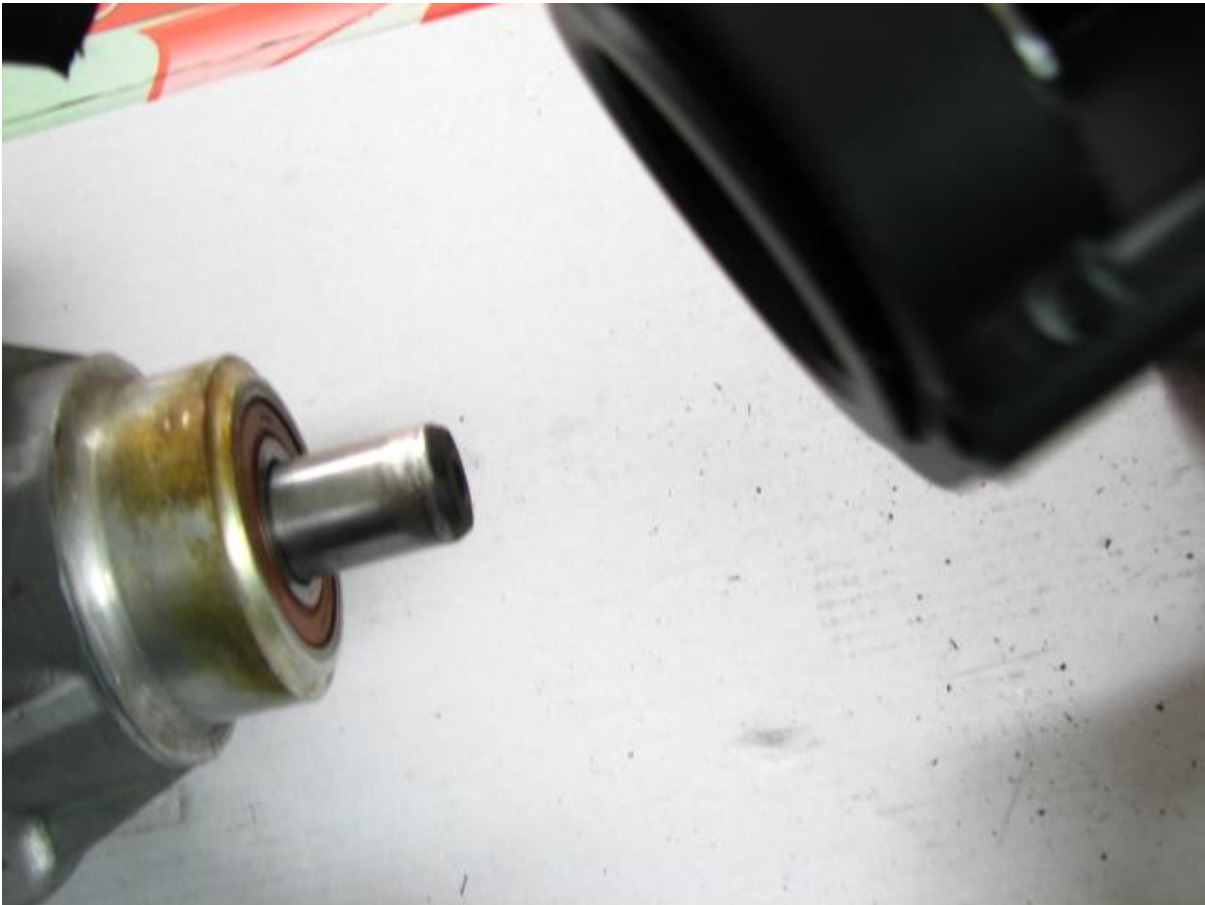

3. Leave the pulley for 10 minutes in microwave



4. The new pulley is hot, use the kitchen glove to avoid hand burn.



5. Get a piece of wood and solid hammer, hit the wood using hammer, the wood must touch the pulley like in the pictures. Push the pulley to the end of shaft.



6. Well done !